

Audible alert / Avertissement acoustique

Acoustic Drive is an accessory of Blunik II that emits sounds during the regularity stage for indicate:

- Regularity: "Piiu, piiu" if you are behind and "Poow, poow" if you are ahead. It does not emit sound when you are on average.
- It emits sounds every xx meters. Usefull for sections of tables.
- Average changes xx meters before, although the average speed is the same.

It is programmed with the Blunik II parameters. Plug & Play. Connect it and you are ready to go. Always unplug when Blunik is switched off.

Acoustic Drive est un accessoire de Blunik II qui émet des sons pendant la spéciale de régularité pour indiquer:

- La régularité: "Piiu, piiu" si vous êtes en retard et "Poow, poow" si vous êtes en avance. Il n'émet pas des sons quand vous êtes à la moyenne.
 - Il émet des sons tous les xx mètres. Utile pour les sections de tables.
 - Indique les changements de moyenne xx mètres en avant, bien que la vitesse moyenne soit la même.
- Il est programmé avec les paramètres de Blunik II. Plug & Play. Vous vous connectez et êtes prêt. Toujours débrancher avec le Blunik éteint.*




Important/Important

Requires Blunik II version 4.04 or higher.

Nécessite Blunik II version 4.04 ou supérieure.

Function 1: Acoustic Drive/ Fonction 1: Acoustic Drive

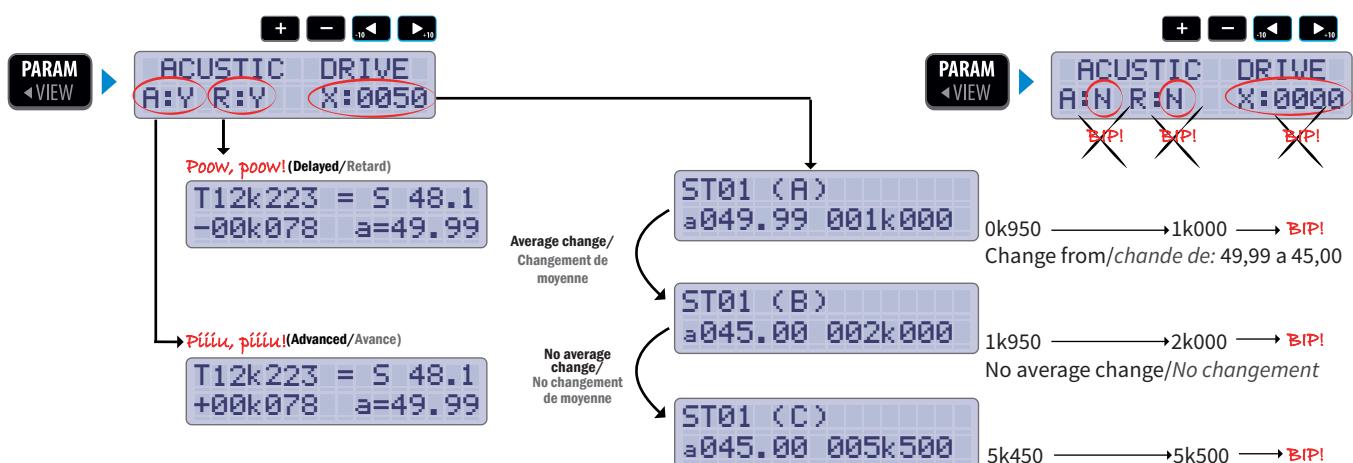

Function 2: Gap Marquer/ Fonction2: Gap Marquer

