d — CALIBRATION

time speed
T17:54:11 S 00.0
ST01 = P000k00
stage distance

ZERO CALCULATE ← START CALIBRATION STAGE

time speed
T17:54:52 S 00.0
ST01 =Z P000k00
stage distance

ZERO CALCULATE ← END CALIBRATION STAGE

time speed
T17:56:10 S 00.0
ST01 =Z P004k51
stage distance

MODE CALIBRATION

Measured 04518
Road Book 04518

\+ / − MODIFY ROAD BOOK DISTACANCE

Measured 04518
Road Book 04320

ENTER SELECT

Calibrated !!
05820 / 01

0.00
4.32

$$V_{km/h} = \frac{e_{km} \times 3600}{t_{seg}}$$

$$e_{km} = \frac{V_{km/h} \times t_{seg}}{3600}$$

$$t_{seg} = \frac{e_{km} \times 3600}{V_{km/h}}$$

t — CLOCK SET

time speed
T17:56:38 S 00.0
ST01 = P000k00
stage distance

PARAM ◂VIEW

CLOCK SYNCHRO
17:56:07.00

\+ / − / -10 / +10

SET A FUTURE TIME

CLOCK SYNCHRO
17:58:00.00

ENTER SELECT SYNCHRONIZE A 17h58'

SYNCHRO OK !!!
17:58:00.00

17:58:00
OFFICIAL
TIME

BLUNIK

LIGHTING INTENSITY

PARAM ◂VIEW ▸ PARAM ◂VIEW ▸ PARAM ◂VIEW

BRIGHT / DAY — Day light

DARKY / NIGHT — Night light

BLUNIK BASIC

More info:
www.blunik.com

s — AVERAGE SPEED PROGRAM

time speed
T17:56:38 S 00.0
ST01 = P000k00
stage distance

START

\+ / − STAGE SELECTION

STAGE

stage
ST01 Partial A
ᵬ045.70 002k510
average until

\+ / − / -10 / +10

VIEW ▸ NEXT PARTIAL

stage
ST01 Partial B
ᵬ038.60 004k580
average until

\+ / − / -10 / +10

ENTER SELECT LAST PARTIAL

time speed
T17:58:12 S 00.0
ST01 = P000k00
stage distance

0.00
45.1km/h
2.51
38.6km/h
4.58

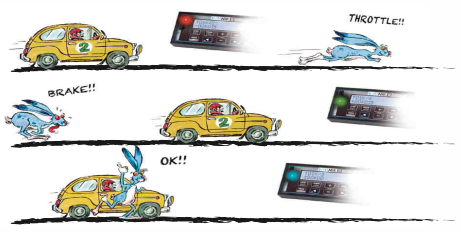

t = d/s — REGULARITY STAGE

time speed
T17:56:38 S 00.0
ST01 = P000k00
stage distance

\+ / − STAGE SELECTION

STAGE

START ON ← START REGULARITY STAGE

distance speed
T00k000 = S 00.0
-00k000 ᵬ=45.70
diference imposed speed

MODE CALIBRATION — REVERSE COUNT? NOT COUNT? NORMAL COUNT? — ENTER SELECT

ZERO CALCULATE ← POINT ADJUSTMENT

distance speed
T02.34 = S 44.4
P02.34 Zᵬ=45.70
partial imposed speed

-10mts -10 / +10 +10mts
CORRECTIONS

distance speed
T02.37 = V 44.5
-00k07 ᵬ=45.70
diference imposed speed

FINISH OFF / FINISH OFF ← END REGULARITY STAGE

time speed
T18:10:17 S 44.0
ST01 = P004k58
stage distance

0.00
2.37
4.58

LED red — T01k076 = V 44.5 / -00k146 m=45.70 — LATE 146m

LED green — T01k076 = V 46.5 / +00k200 m=45.70 — ADVANCE 200m

LED blue — T01k076 = V 45.7 / +00k000 m=45.70 — OK!!

L

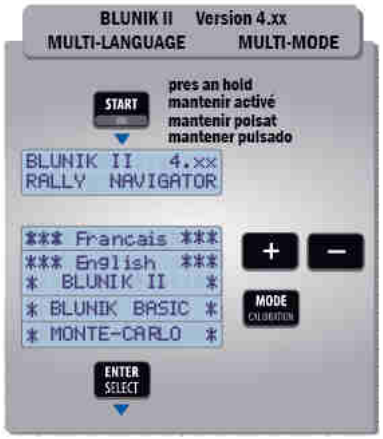

BLUNIK BASIC

|ENG|